 





### Easel - Parts



Dowel Rails

 
Pivot Blocks



Pivot Pins



Security Hook

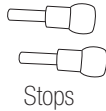

Stops

Pivot Arms




Fixings Pack



Eyes

Screws

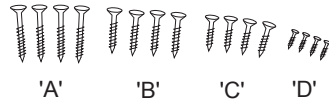


'A'

'B'

'C'

'D'

 Centre Strut



Support Leg





Centre Strut





Support Leg

### Easel - Assembly



Fit the pivot blocks to the centre strut using screws 'C'

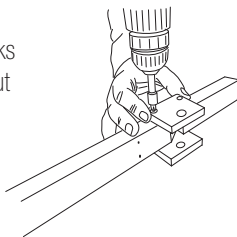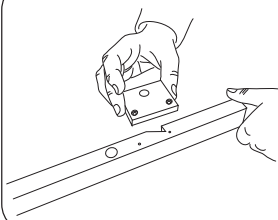

Fit the pivot arms to the centre strut using screws 'B'

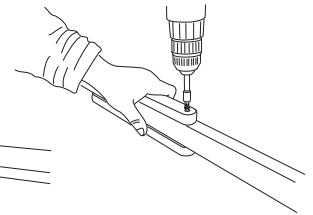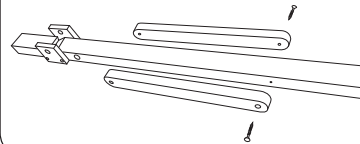


Push the short ...

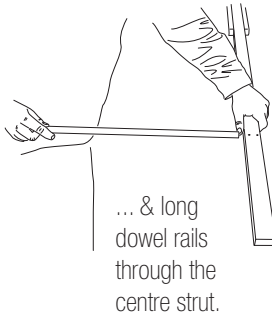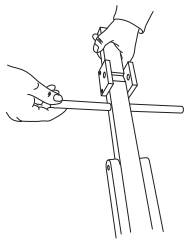


... & long dowel rails through the centre strut.


Side Legs

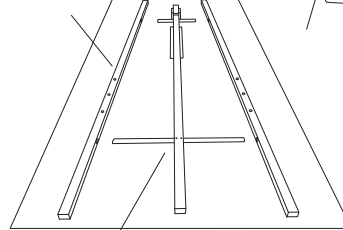


Centre strut with dowel rails.

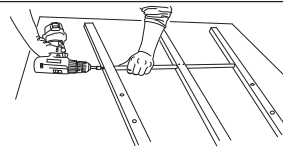


Using screws 'A' secure the side legs to the dowel rails.

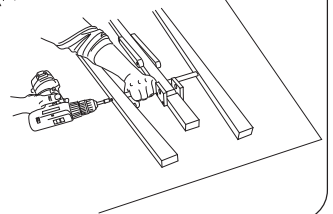


Position the centre strut equal about the side legs.

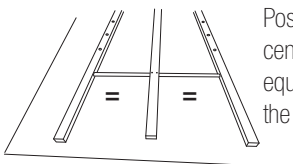


Secure using screws 'D'

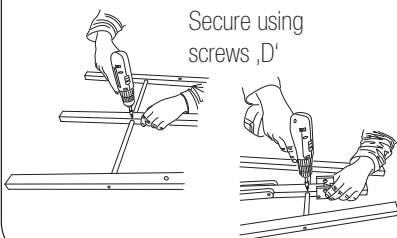


Push the pivot pin through the pivot blocks & support leg.

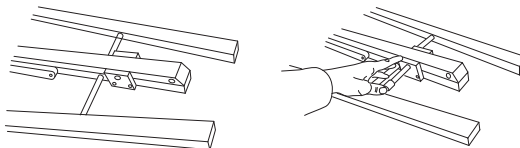

Use screws 'B' to secure the pivot arm to the support leg.

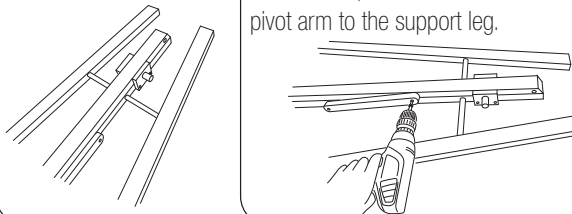



Open to use.

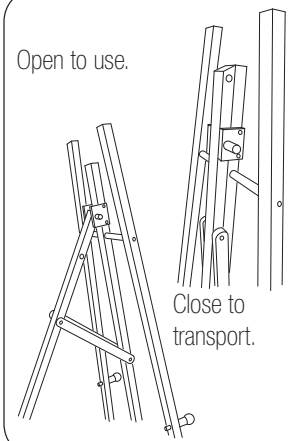


Close to transport.

### Fitting the Security Hook



Insert the stops to support your frame at your desired height.

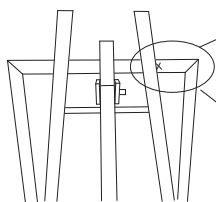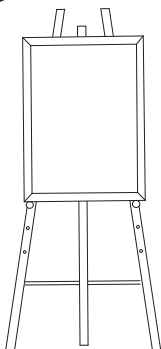

Mark on the rear of the frame near the side leg.

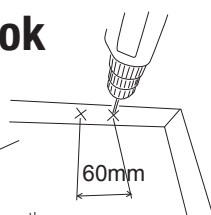

Measure 60 mm, drill & fit the two eyes.

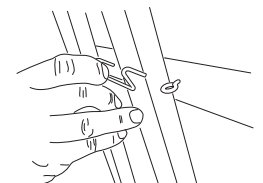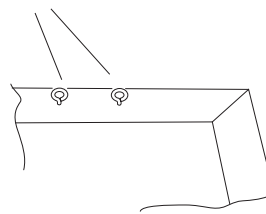

Replace on the easel & fit the security hook.